
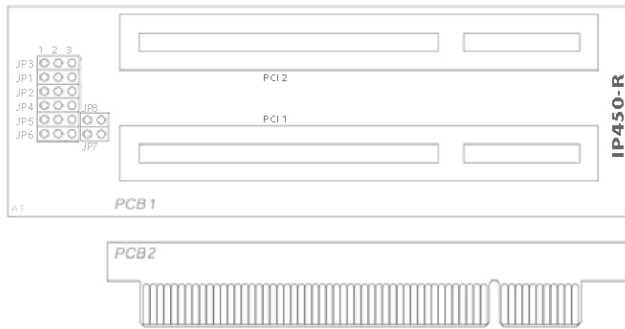


IP450

2-PCI Riser Card

with Flexible

User's Guide
Ver. 1.1

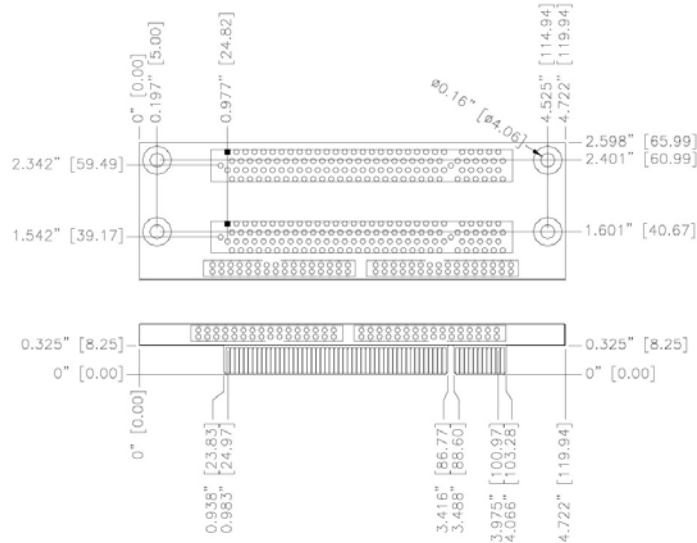

Jumper Settings:

Use the following jumpers to configure the riser card for use with either IB830 or I815E mainboards.

JP1, JP2, JP3, JP4, JP5: For IB830 / I815E Board

Jumper	Setting	Function
 1 2 3	Pin 1-2 Short/Closed	Use card with IB830
 1 2 3	Pin 2-3 Short/Closed	Use card with I815E

JP6: For IB830 / I815E Board

Jumper	Setting	Function
 1 2 3	Pin 1-2 Short/Closed	Use card with I815E
 1 2 3	Pin 2-3 Short/Closed	Use card with IB830

JP7: For IB830 / I815E Board

Jumper	Setting	Function
 1 2	Jumper Closed	Use card with I815E
 1 2	Jumper Open	Use card with IB830

JP8: For IB830 / I815E Board

Jumper	Setting	Function
 1 2	Jumper Closed	Use card with IB830
 1 2	Jumper Open	Use card with I815E

Routing Table:

IB830	PCI1	PCI2
IDSEL	AD31	AD30
INTA#	B	C
INTB#	C	D
INTC#	D	A
INTD#	A	B

I815E	PCI1	PCI2
IDSEL	AD21	AD20
INTA#	C	B
INTB#	D	C
INTC#	A	D
INTD#	B	A