

SI-22 Series

User Manual

V1.1



Copyright © 2013 All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission.

Products and corporate names mentioned in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.



Tel. (514) 832-0808 Fax. (514) 832-0128
Toll Free: 1 (866) 590-4288
Email: info@ibt.ca Web: www.ibt.ca



Table of Contents

| | |
|---|-----------|
| Setting up your system | 5 |
| Care during use | 6 |
| Acknowledgments | 7 |
| CHAPTER 1 INTRODUCTION | 8 |
| 1.1 General Description | 9 |
| 1.2 System Specifications..... | 9 |
| 1.2.2 Dimensions | 10 |
| 1.2.3 I/O View | 11 |
| 1.3 Exploded View of the SI-22 Assembly | 12 |
| 1.3.1 Parts Description | 12 |
| 1.4 Packing List | 12 |
| 1.4.1 Optional Items | 13 |
| 1.5 HARDWARE INSTALLATION | 14 |
| 1.5.1 Installing the Wireless Module | 14 |
| 1.5.2 Installing the mSATA Module | 16 |
| CHAPTER 2 MOTHERBOARD INTRODUCTION | 18 |
| 2.1 Installing the Memory | 18 |
| 2.2 Setting the Jumpers | 19 |
| 2.3 Connectors on IB922 | 20 |
| CHAPTER 3 BIOS SETUP | 22 |
| CHAPTER 4 DRIVERS INSTALLATION | 39 |
| 4.1 VGA Drivers Installation | 39 |
| 4.2 Realtek HD Audio Driver Installation | 43 |
| 4.3 LAN Drivers Installation | 44 |
| Appendix | 45 |
| Mounting SI-22 to the Wall..... | 45 |
| Wall Mounting Requirements..... | 45 |
| Selecting the Location..... | 45 |

Safety Information

Your SI-22 is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions

Setting up your system

Read and follow all instructions in the documentation before you operate your system.

Do not use this product near water.

Set up the system on a stable surface. Do not secure the system on any unstable plane.

Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.

Slots and openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the system for ventilation.

Never insert objects of any kind into the ventilation openings.

This system should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.

Use this product in environments with ambient temperatures between 0°C and 45°C.

If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.

DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 80° C (176° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Care during use

Do not walk on the power cord or allow anything to rest on it.

Do not spill water or any other liquids on your system.

When the system is turned off, a small amount of electrical current still flows.

Always unplug all power, and network cables from the power outlets before cleaning the system.

If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.

- The power cord or plug is damaged.
- Liquid has been spilled into the system.
- The system does not function properly even if you follow the operating instructions.
- The system was dropped or the cabinet is damaged.

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

WARNING

HAZARDOUS MOVING PARTS

KEEP FINGERS AND OTHER BODY PARTS AWAY

Acknowledgments

AMI is a registered trademark of AMI Software International, Inc.

AMD and ATI are registered trademarks of AMD Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

FINTEK is a registered trademark of FINTEK Electronics Corporation.

REALTEK is a registered trademark of REALTEK Electronics Corporation.

All other product names or trademarks are properties of their respective owners.

CHAPTER 1 INTRODUCTION

1.1 General Description

The “Signature Book™” SI -22 is a professional fanless digital signage system powered by the new AMD Embedded new generation G-Series quad-core APU with DASH compliance for remote control, and compact & slim design. It supports 2x HDMI, 1x RJ45 for LAN, 1x RJ45 for RS232, 1x USB2.0 and 2x USB3.0 ports giving a great selection for data communication in display applications.




1.2 System Specifications

1.2.1 Hardware Specifications

| | |
|-----------------------|--|
| Model Name | SI-22 |
| System Mainboard | IB922 |
| CPU | AMD Embedded G-Series SoC; 4 Cores @ 1.5 GHz APU FT3 BGA package |
| Chipset | SoC Integrated |
| Memory | 1x DDR3 1600 MHz SO-DIMM, Max. 8GB (Non-ECC) |
| I/O Interface | 2x HDMI 1.4a 2x USB 3.0 ports, 1x USB 2.0 port 1x RJ45 for LAN, 1x RJ45 for RS232 2x Microjack audio connectors for Line-in / Line-out Power LED, 1x power on/off button 1x DC jack |
| Storage | 1 x mSATA |
| Expansion Slots | 1x Mini PCI-E(x1) slots for Wi-Fi + Bluetooth, 3G, GPS and TV tuner options |
| Power Supply | +12V DC-in with 60W power adaptor |
| Construction | Aluminum + SGCC |
| Chassis Color | Black & White |
| Mounting | STD system bracket |
| Dimensions | 190mm(W) x 130mm(D) x 19.5mm(H) 7.5"(W) x 5.1"(D) x 0.77"(H) |
| Operating Temperature | 0°C~ 45°C (32°F~113°F) |
| Storage Temperature | -20° ~ 80°C (-4°F~176°F) |
| Relative Humidity | 5~90% @45°C (non-condensing) |
| Vibration | mSATA: 5 Grms/5~500Hz random operation |
| RoHS | Available |
| Certification | CE, FCC, UL, CCC |

° *This specification is subject to change without prior notice.*

1.2.2 Dimensions

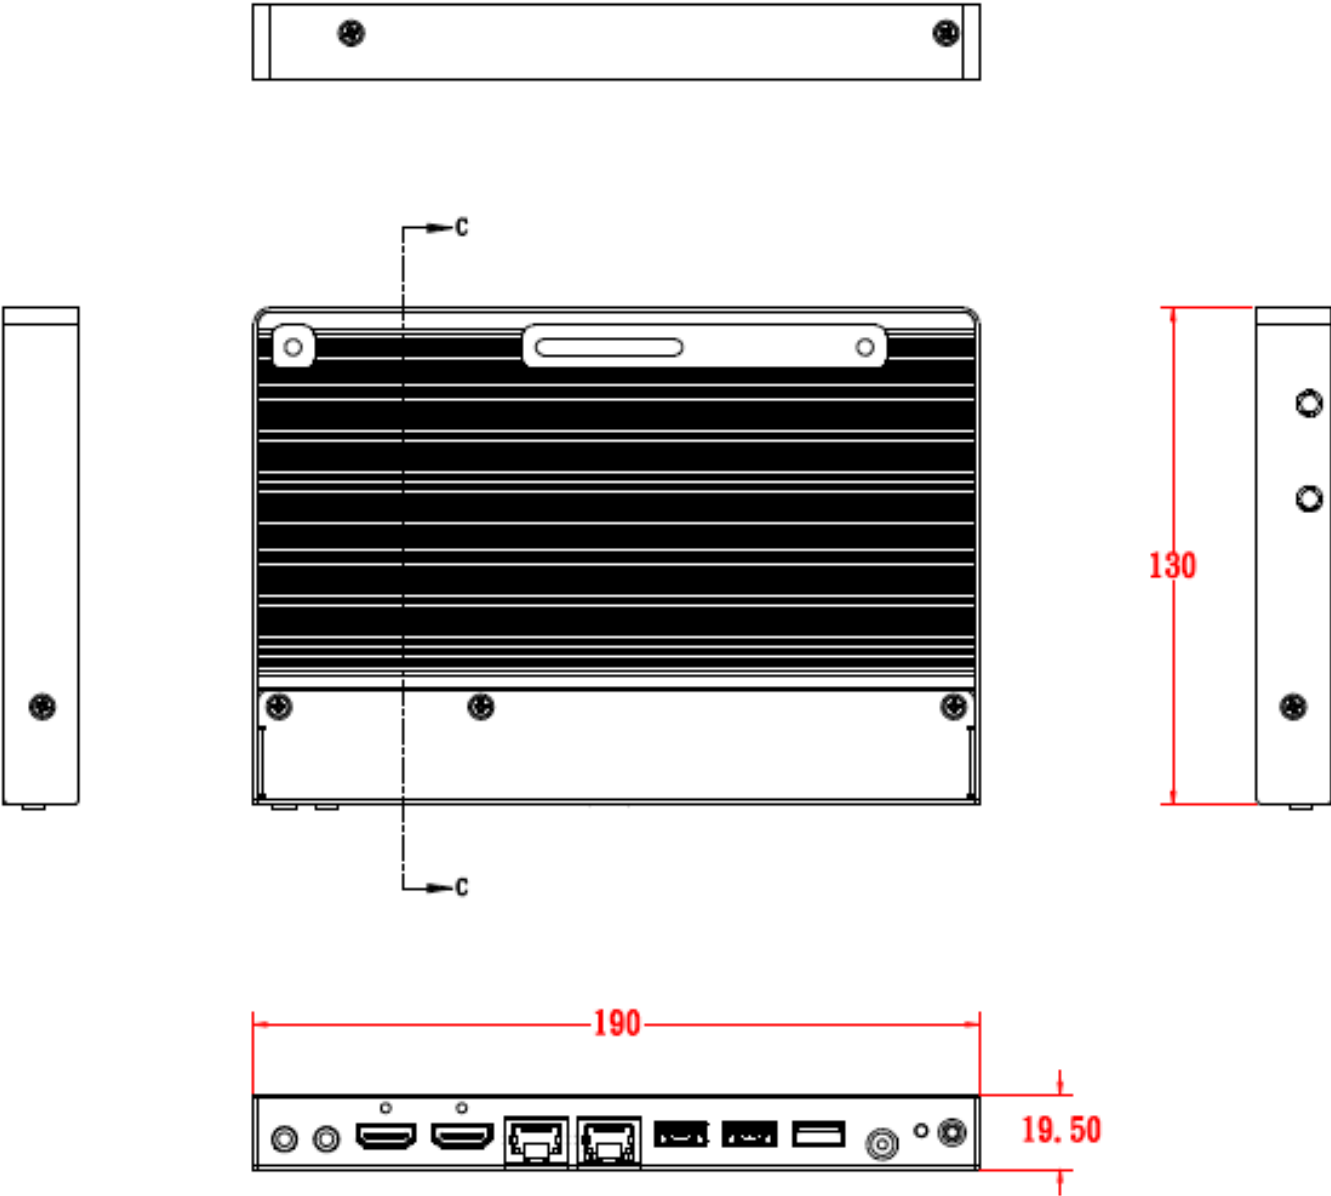


1.2.3 I/O View



| Item | Connector | Item | Connector |
|------|-------------------|------|---------------------|
| 1 | Line-in | 6 | 2x USB 3.0 |
| 2 | Line-out | 7 | 1x USB 2.0 |
| 3 | 2x HDMI 1.4a | 8 | DC jack |
| 4 | 1x RJ45 for RS232 | 9 | Power LED |
| 5 | 1x RJ45 for LAN | 10 | Power on/off button |



1.3 Exploded View of the SI-22 Assembly

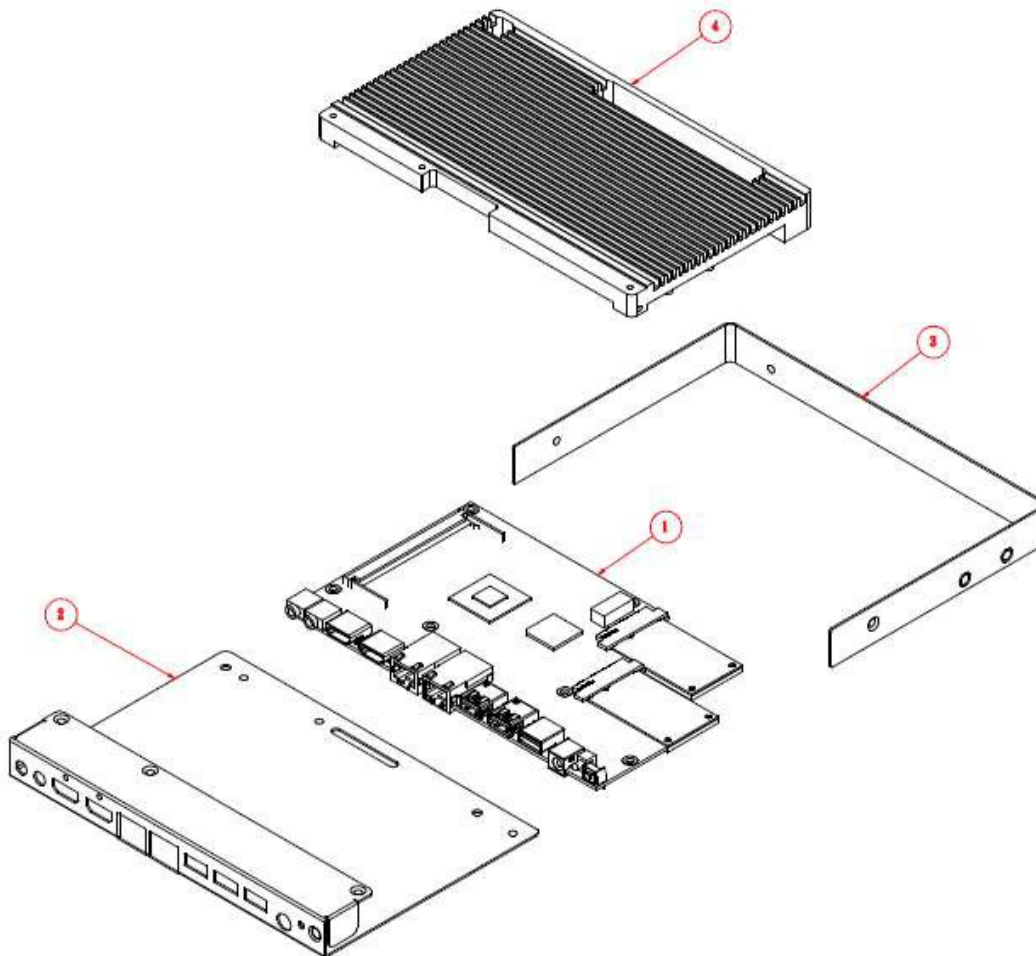

1.3.1 Parts Description

| Part No. | Description | Part No. | Description |
|----------|-------------------|----------|----------------|
| 1 | IB922 motherboard | 2 | SI-22 Base |
| 3 | SI-22 Cover | 4 | SI-22 heatsink |

1.4 Packing List

| Item No. | Description | Qty |
|----------|---------------|-----|
| 1 | Driver CD | 1 |
| 2 | Power adaptor | 1 |
| 3 | Power Cord | 1 |



1.4.1 Optional Items

| WiFi Solution | Description | |
|--------------------|--|---|
| QCOM WiFi module | Wireless LAN Card; 802.11 B/G/N+BT HALF Card [Q802XKN3B] RoHS (A008WIRELESS00700P) |  |
| External Antenna | Wifi Antenna (A055RFA02C2M20800P) | |
| Internal cable-1/2 | From Wifi module to Rear/Front panel (A055RFA0000021000P/A055RFA0000032000P) |  |
| Bracket | MPCIE-EXT V-B1 Bracket, RoHS; Extend Half to Full size. (SC2MPCIEEXT0B1100P) |  |
| 3G Solution | Description | |
| ZU 202 | Wireless; 3.75G UMTS/HSPA [ZU202] RoHS (A008WIRELESS00520P) |  |
| ZU 200 | Wireless; 3.75G UMTS/HSPA & GPS Module [ZU200] RoHS (A008WIRELESS00510P) | |
| Cable | Cable; Antenna-2 30CM P 2pcs (C501ANT0200300000P) | |
| Antenna | Antenna; 3G, P, 2pcs (A055ANT0921Q2P000P) | |
| COM Port Cable | Description | |
| EXT-311 | Cable; EXT-311 2-HD 10C, 150CM; DSUB-9F => RJ45-10M RoHS (C501EXT3110A12000P) |  |
| EXT-312 | Cable; EXT-312 2-HD 10C, 150CM; DSUB-9M => RJ45-10M RoHS (C501EXT3120A12000P) | |
| EDID dongle | Description | |
| H8246JT021-001 | EDID Emulator Dongle (HDMI), ADAPTER; HDMI 19P A/M TO A/F (A025HDMI001010000P) |  |

1.5 HARDWARE INSTALLATION

1.5.1 Installing the Wireless Module

1. Remove the six screws on the sides that are used to secure the white cover to the chassis. Once all the screws are removed, from the side, push the cover forward to remove it.

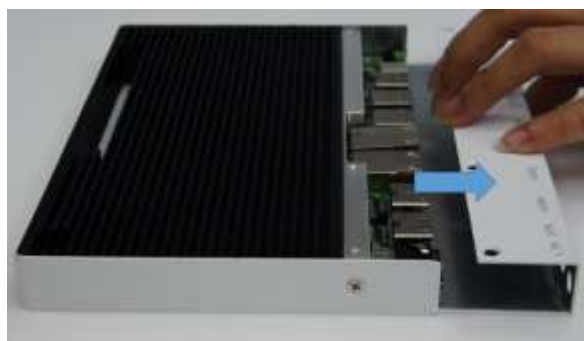
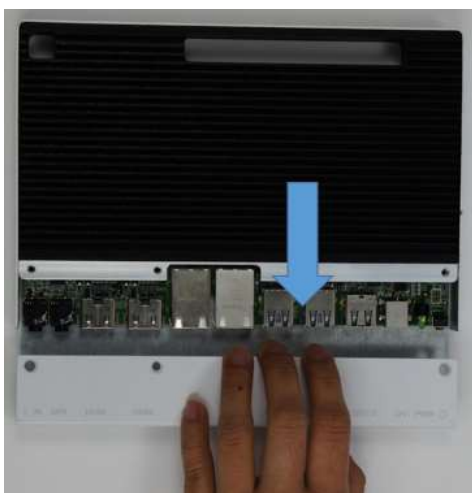


2. Push the WIFI module into the slot. And screw two screws to secure the module to the slot.





1.5.2 Installing the mSATA Module

1. Remove the six screws on the sides that are used to secure the white cover to the chassis. Once all the screws are removed, from the side, push the cover forward to remove it.

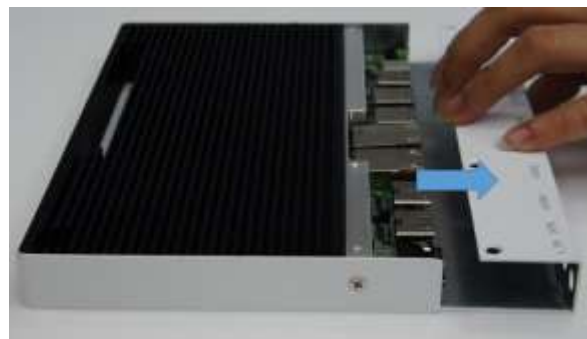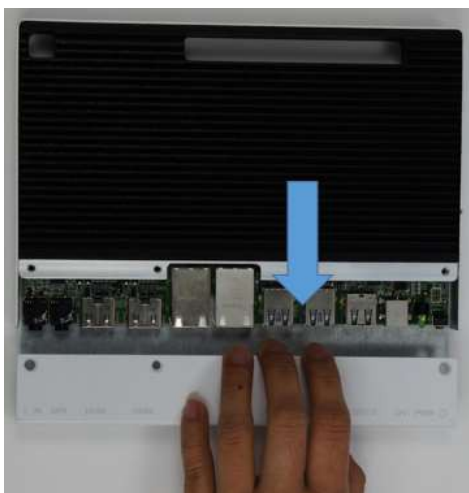

2. Push the mSATA module into the slot. And screw two screws to secure the module to the slot.

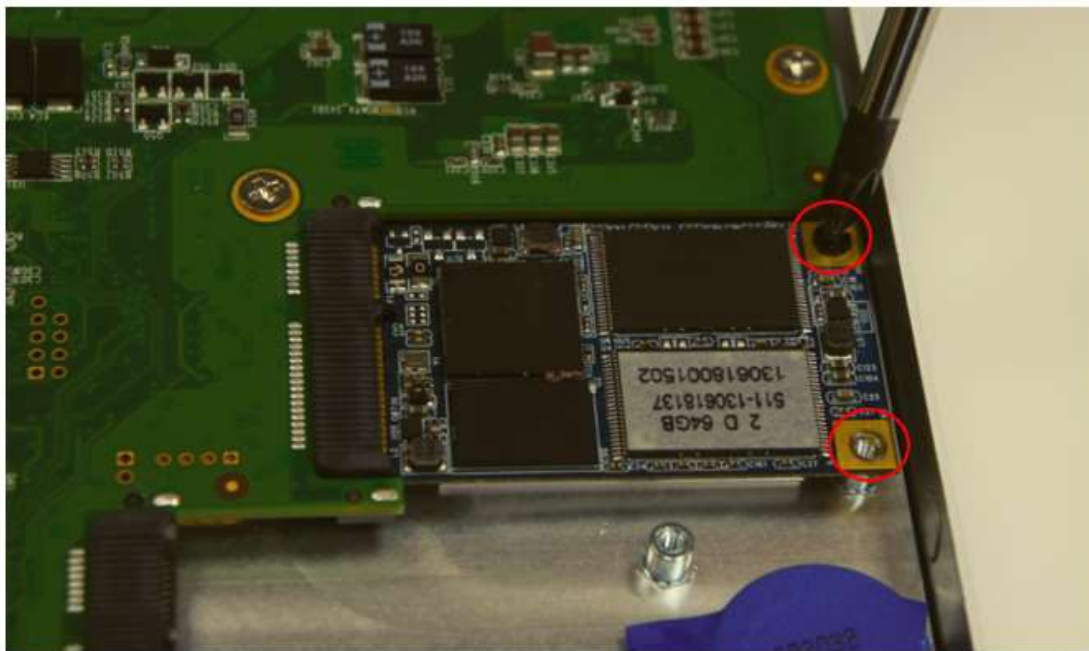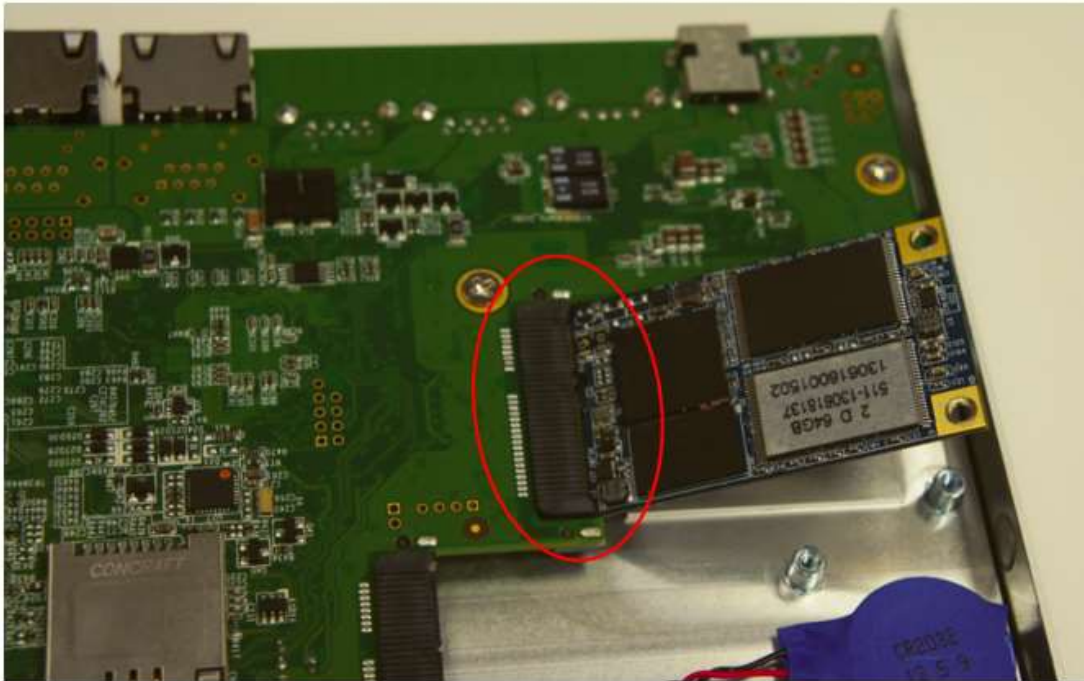

CHAPTER 2 MOTHERBOARD INTRODUCTION


2.1 Installing the Memory

The IB922 board supports one DDR3 memory socket J6 for a maximum total memory of 8GB DDR3 memory type.

Installing and Removing Memory Modules

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:


1. Hold the DDR3 module so that the key of the DDR3 module aligned with that on the memory slot.
2. Gently push the DDR3 module in an upright position until the clips of the slot close to hold the DDR3 module in place when the DDR3 module touches the bottom of the slot.
3. To remove the DDR3 module, press the clips with both hands.

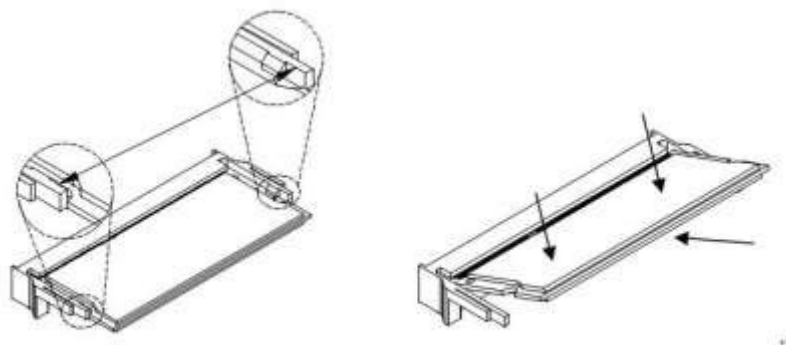



2.2 Setting the Jumpers

Jumpers are used on IB922 to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB922 and their respective functions.


Jumper Locations on IB922

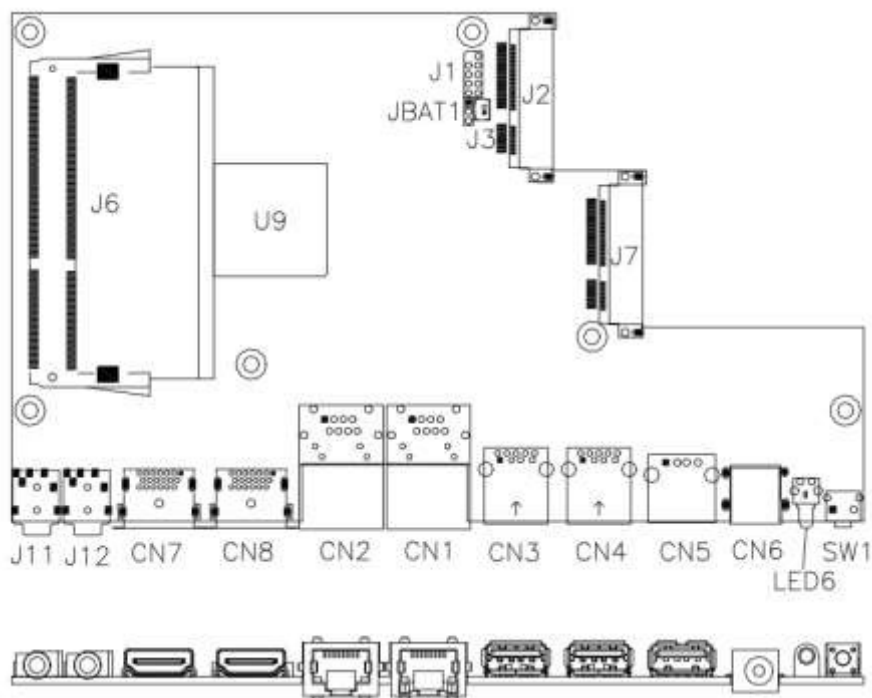

JBAT1: Clear CMOS Contents

| JBAT1 | Setting | Function |
|--|-------------------------|------------|
|  1 2 3 | Pin 1-2 Short/Closed | Normal |
|  1 2 3 | Pin 2-3 Short/Closed | Clear CMOS |

2.3 Connectors on IB922

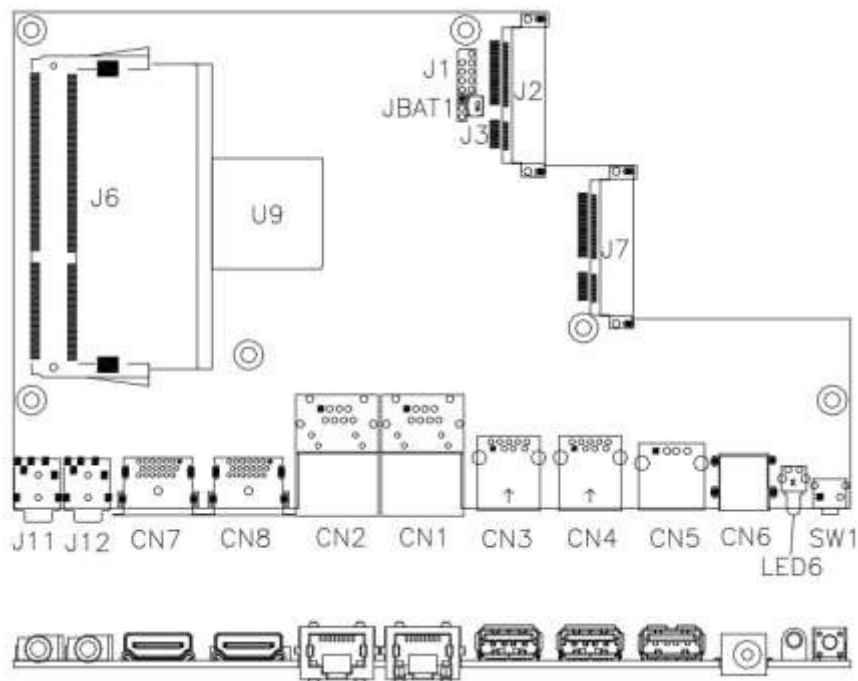

SW1: Power On Button

CN1: Gigabit LAN (RTL8111DP)

CN2: COM1/RS232 Serial Port (RJ45 TYPE)

| Signal Name | Pin # | Pin # | Signal Name |
|----------------------|-------|-------|---------------------|
| RTS, Request to send | 1 | 2 | Data terminal ready |
| TXD, Transmit data | 3 | 4 | GND, ground |
| GND, ground | 5 | 6 | RXD, Receive data |
| DSR, Data set ready | 7 | 8 | CTS, Clear to send |

CN3, CN4: USB 3.0 Connector

CN5: USB 2.0 Connector

CN6: Board Input Power Connector

CN7, CN8: HDMI Connector

J1: SPI Flash Connector (factory use only)

J2: Mini PCIE Connector (with **USB SIMM support)**

J3: Battery Connector

J6: DDR3 SO-DIMM Socket

J7: Mini PCIE Connector (w/ **M-SATA support)**

J11: Audio LINE_IN Connector

J12: Audio LINE_OUT Connector

LED6: Power On LED

CHAPTER 3 BIOS SETUP

This chapter describes the different settings available in the BIOS that comes with the board. The topics covered in this chapter are as follows:

3.1 BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also adds virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

3.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> or <ESC> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.



Main Settings

Aptio Setup Utility – Copyright © 2011 American Megatrends, Inc.

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|--------------------|----------|---------|------------------|----------|---|
| BIOS Information | | | | | Choose the system default language |
| Memory Information | | | | | → ← Select Screen |
| Total memory | | | 8176 MB (DDR3) | | ↑ ↓ Select Item |
| System Date | | | [Tue 01/20/2009] | | Enter: Select |
| System Time | | | [15:27:20] | | + - Change Field |
| Access Level | | | Administrator | | F1: General Help |
| | | | | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save ESC: Exit |

System Date

Set the Date. Use Tab to switch between Data elements.

System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------|--------------------------------------|---------|------|----------|-----------------------|
| | ▶ PCI Subsystem Settings | | | | → ← Select Screen |
| | ▶ ACPI Settings | | | | ↑ ↓ Select Item |
| | ▶ CPU Configuration | | | | Enter: Select |
| | ▶ IDE Configuration | | | | + - Change Field |
| | ▶ Shutdown Temperature Configuration | | | | F1: General Help |
| | ▶ iSmart Controller | | | | F2: Previous Values |
| | ▶ USB Configuration | | | | F3: Optimized Default |
| | ▶ F81866 Super IO Configuration | | | | F4: Save |
| | ▶ F81866 H/W Monitor | | | | ESC: Exit |

PCI Subsystem Settings

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------------------------|----------|---------|-------------------|----------|--|
| PCI Bus Driver Version | V 2.0502 | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| PCI Common Settings | | | | | |
| PCI Latency Timer | | | 32 PCI Bus Clocks | | |
| VGA Palette Snoop | | | Disabled | | |
| PERR# Generation | | | Disabled | | |
| SERR# Generation | | | Disabled | | |
| ▶ PCI Express Settings | | | | | |

PCI Latency Timer

Value to be programmed into PCI Latency Timer Register.

VGA Palette Snoop

Enables or disables VGA Palette Registers Snooping.

PERR# Generation

Enables or disables PCI device to generate PERR#.

SERR# Generation

Enables or disables PCI device to generate SERR#.

PCI Express Settings

| Aptio Setup Utility | | | | | |
|--------------------------------------|--|---------|--------------|----------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| PCI Express Device Register Settings | | | | | |
| | Relaxed Ordering | | Disabled | | |
| | Extended Tag | | Disabled | | |
| | No Snoop | | Enabled | | |
| | Maximum Payload | | Auto | | |
| | Maximum Read Request | | Auto | | |
| PCI Express Link Register Settings | | | | | |
| | ASPM Support | | Disabled | | → ← Select Screen |
| | WARNING: Enabling ASPM may cause PCI-E devices to fail | | Disabled | | ↑ ↓ Select Item |
| | Extended Synch | | Disabled | | Enter: Select |
| | Link Training Retry | | 5 | | + - Change Field |
| | Link Training Timeout (uS) | | 100 | | F1: General Help |
| | Unpopulated Links | | Keep Link ON | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save ESC: Exit |

ACPI Settings

| Aptio Setup Utility | | | | | |
|---------------------|--------------------------------|---------|---------------------|----------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| ACPI Settings | | | | | |
| | Enable ACPI Auto Configuration | | Disabled | | → ← Select Screen |
| | Enable Hibernation | | Enabled | | ↑ ↓ Select Item |
| | ACPI Sleep State | | S3 (Suspend to R..) | | Enter: Select |
| | Lock Legacy Resources | | Disabled | | + - Change Field |
| | | | | | F1: General Help |
| | | | | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save ESC: Exit |

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select ACPI sleep state the system will enter, when the SUSPEND button is pressed.

Lock Legacy Resources

Enabled or Disabled Lock of Legacy Resources.

CPU Configuration

This section shows the CPU configuration parameters.

| Aptio Setup Utility | | | | | |
|---|----------|---------|----------|----------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| CPU Configuration | | | | | |
| Module Version: 4.6.5.1 TrinityPI 012 AGESA Version: 1.0.0.3 | | | | | |
| PSS Support | | | Enable | | → ← Select Screen |
| PSTATE Adjustment | | | Pstate 0 | | ↑ ↓ Select Item |
| NX Mode | | | Enable | | Enter: Select |
| SVM Mode | | | Enable | | + - Change Field |
| CPB Mode | | | Auto | | F1: General Help |
| C6 Mode | | | Enable | | F2: Previous Values |
| ▶ Node 0 Information | | | | | F3: Optimized Default |
| | | | | | F4: Save |
| | | | | | ESC: Exit |

PSS Support

Enable/disable the generation of ACPI _PPC, _PPC, _PSS, and _PCT objects.

PSTATE Adjustment

Provide to adjust startup P-state level.

PPC Adjustment

Provide to adjust _PPC object.

NX Mode

Enable/disable No-execute page protection function.

SVM Mode

Enable/disable CPU Virtualization.

CPB Mode

Enable/disable CPB.

C6 Mode

Auto/disable CPB.

Node 0 Information

View memory information related to Node 0.

IDE Configuration

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|-------------------|----------|-------------------------|------|----------|---|
| IDE Configuration | | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| SATA Port0 | | InnoLite CFast (16.0GB) | | | |
| SATA Port2 | | Not Present | | | |

Shutdown Temperature Configuration

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|---------------------------|----------|---------|----------|----------|---|
| ACPI Shutdown Temperature | | | Disabled | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |

ACPI Shutdown Temperature

The default setting is Disabled.

iSmart Controller

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------------------------------|----------|---------|------|----------|---|
| iSmart Controller | | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| Power-On after Power failure | | Disable | | | |
| Schedule Slot 1 | | None | | | |
| Schedule Slot 2 | | None | | | |
| | | | | | |

Power-On after Power failure

Enable or Disable.

Schedule Slot 1 / 2

Setup the hour/minute for system power on.

USB Configuration

| Aptio Setup Utility | | | | | |
|-------------------------------------|----------|---------|---------|----------|---|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| USB Configuration | | | | | |
| USB Devices: 1 Keyboard, 1 Mouse | | | | | |
| Legacy USB Support | | | Enabled | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| USB3.0 Support | | | Enabled | | |
| XHCI Hand-off | | | Enabled | | |
| EHCI Hand-off | | | Enabled | | |
| USB hardware delays and time-outs: | | | | | |
| USB Transfer time-out | | | 20 sec | | |
| Device reset time-out | | | 20 sec | | |
| Device power-up delay | | | Auto | | |

Legacy USB Support

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option keeps USB devices available only for EFI applications.

USB3.0 Support

Enable/Disable USB3.0 (XHCI) Controller support.

XHCI Hand-off

This is a workaround for Oses without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

EHCI Hand-off

Enabled/Disabled. This is a workaround for Oses without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB Transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass Storage device start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

F81866 Super IO Configuration

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|-------------------------------|----------|---------|------|----------|-----------------------|
| F81866 Super IO Configuration | | | | | → ← Select Screen |
| F81866 Super IO Chip | | | | | ↑ ↓ Select Item |
| ▶ Serial Port 0 Configuration | | | | | Enter: Select |
| ▶ Serial Port 1 Configuration | | | | | + - Change Field |
| | | | | | F1: General Help |
| | | | | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save |
| | | | | | ESC: Exit |

Serial Port Configuration

Set Parameters of Serial Ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

F81866 H/W Monitor**Aptio Setup Utility**

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|--|----------|---------|-----------|----------|-------------|
| PC Health Status | | | | | |
| System Smart Fan Function | | | Disabled | | |
| CPU Smart Fan Function | | | Disabled | | |
| SYS_Fan2 smart fan control | | | Disabled | | |
| SYS Temp | | | +35 C | | |
| CPU Temp | | | +52 C | | |
| Vcore | | | +1.000 V | | |
| +5V | | | +4.413 V | | |
| +12V | | | +11.408 V | | |
| +1.5V | | | +1.544 V | | |
| → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit | | | | | |

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the board. The values are read-only values as monitored by the system and show the PC health status.

Smart Fan Function

This field enables or disables the smart fan feature. At a certain temperature, the fan starts turning. Once the temperature drops to a certain level, it stops turning again.

Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------|----------|--|------|----------|--|
| | | <ul style="list-style-type: none"> ▶ South Bridge ▶ North Bridge | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------|----------|---|------|----------|--|
| | | AMD Reference code Version: Trinity PI 1.0.0.3 <ul style="list-style-type: none"> ▶ SB SATA Configuration ▶ SB USB Configuration | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------------------------|----------|---------|-------------|----------|---|
| OnChip SATA Channel | | | Enabled | | → ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| OnChip SATA Type | | | Native iDE | | |
| OnChip iDE mode | | | Legacy mode | | |
| SATA IDE Combined Mode | | | Enabled | | |

OnChip SATA Channel

Enabled or Disabled.

OnChip SATA Type

Native IDE /n RAID /n AHCI /n AHCI /n Legacy IDE /n IDE->AHCI /n HyperFlash

OnChip IDE mode

Legacy mode or Native mode

SATA IDE Combined Mode

Enabled or Disabled.

SB USB Configuration Options:

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------|----------|---------|-----------------------------|----------|-------------|
| | | | XHCI Controller 0 | Enabled | |
| | | | XHCI Controller 1 | Enabled | |
| | | | DHCI HC(Bus 0 Dev 18 Fn 0) | Enabled | |
| | | | EHCI HC(Bus 0 Dev 18 Fn 2) | Enabled | |
| | | | DHCI HC(Bus 0 Dev 19 Fn 0) | Enabled | |
| | | | EDHCI HC(Bus 0 Dev 19 Fn 0) | Enabled | |
| | | | DHCI HC(Bus 0 Dev 20 Fn 5) | Enabled | |
| | | | USB Port 0 | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | USB Port | Enabled | |
| | | | XHCI0 Port 0 | Enabled | |
| | | | XHCI0 Port 1 | Enabled | |
| | | | XHCI1 Port 0 | Enabled | |
| | | | XHCI1 Port 1 | Enabled | |

→ ← Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

Boot Settings

| Aptio Setup Utility | | | | | |
|------------------------|----------|-------------------|------|-----------------------|-------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| Boot Configuration | | | | | |
| Setup Prompt Timeout | | 1 | | | |
| Bootup NumLock State | | On | | | |
| Quiet Boot | | Disabled | | | |
| Fast Boot | | Disabled | | | |
| CSM16 Module Version | | 07.69 | | | |
| GateA20 Active | | Upon Request | | | |
| Option ROM Messages | | Force BIOS | | | |
| INT19 Trap Response | | Immediate | | → ← Select Screen | |
| CSM Support | | Enabled | | ↑ ↓ Select Item | |
| Boot Option Priorities | | | | Enter: Select | |
| Boot Option #1 | | SATA PM: WDC WD80 | | +- Change Field | |
| ▶ CSM parameters | | | | F1: General Help | |
| | | | | F2: Previous Values | |
| | | | | F3: Optimized Default | |
| | | | | F4: Save ESC: Exit | |

Setup Prompt Timeout

Number of seconds to wait for setup activation key.
65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables/Disables Quiet Boot option.

Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

GateA20 Active

UPON REQUEST – GA20 can be disabled using BIOS services.

ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Messages

Set display mode for Option ROM. Options are Force BIOS and Keep Current.

INT19 Trap Response

Enable: Allows Option ROMs to trap Int 19.

Boot Option Priorities

Sets the system boot order.

CSM parameters

OpROM execution, boot options, filter, etc.

| Aptio Setup Utility | | | | | |
|---------------------|----------|---------|-------------------------------|-----------------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| | | | Launch CSM | Always | |
| | | | Boot option filter | UEFI and Legacy | → ← Select Screen |
| | | | Launch PXE OpROM policy | Do not launch | ↑ ↓ Select Item |
| | | | Launch Storage OpROM policy | Legacy only | Enter: Select |
| | | | Launch Video OpROM policy | Legacy only | + - Change Field |
| | | | Other PCI device ROM priority | Legacy OpROM | F1: General Help |
| | | | | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save ESC: Exit |

Launch CSM

This option controls if CSM will be launched.

Boot option filter

This option controls what devices system can boot to.

Launch PXE OpROM policy

Controls the execution of UEFI and Legacy PXE OpROM.

Launch Storage OpROM policy

Controls the execution of UEFI and Legacy Storage OpROM.

Launch Video OpROM policy

Controls the execution of UEFI and Legacy Video OpROM.

Other PCI device ROM priority

For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

| Aptio Setup Utility | | | | | |
|---|----------|---------|------|----------|-----------------------|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| Password Description | | | | | |
| If ONLY the Administrator's password is set, then this only limit access to Setup and is only asked for when entering Setup. | | | | | |
| If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights | | | | | |
| The password length must be in the following range: | | | | | |
| Minimum length | | | | 3 | |
| Maximum length | | | | 20 | |
| Administrator Password | | | | | → ← Select Screen |
| User Password | | | | | ↑ ↓ Select Item |
| UEFI Secure Boot Management | | | | | Enter: Select |
| Secure Boot control | | | | Enabled | + - Change Field |
| ▶ Secure Boot Policy | | | | | F1: General Help |
| ▶ Key Management | | | | | F2: Previous Values |
| | | | | | F3: Optimized Default |
| | | | | | F4: Save ESC: Exit |

Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

Secure Boot control

Secure Boot flow control.

Secure Boot is possible only if System runs in User Mode.

Secure Boot Policy

Select Secure Boot mode extended options: Internal FV, Option ROM, Removable Media, Fixed Media.

Administrator Password

Set Setup Administrator Password.

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------------------------------|----------|---------|------|----------|--|
| North Bridge Configuration | | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| ▶ GFX Configuration | | | | | |
| Memory Information | | | | | |
| Total memory: 8176 MB (DDR3) | | | | | |
| ▶ Socket 0 Information | | | | | |

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|---------------------|----------|---------|------|----------|-------------|
| GFX Configuration | | | | | |
| Integrated Graphics | | | Auto | | |

Integrated Graphics

Options are Auto Disabled and Force

Aptio Setup Utility

| Main | Advanced | Chipset | Boot | Security | Save & Exit |
|------------------------------------|----------|---------|------|----------|--|
| Socket 0 Information | | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| Starting Address: 0KB | | | | | |
| Ending Address: 8388607 KB | | | | | |
| Dimm0: Not Present | | | | | |
| Dimm1: size=8192 MB, speed=667 MHz | | | | | |

Save & Exit Settings

| Aptio Setup Utility | | | | | |
|---|----------|---------|------|----------|--|
| Main | Advanced | Chipset | Boot | Security | Save & Exit |
| Save Changes and Exit | | | | | → ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit |
| Discard Changes and Exit | | | | | |
| Save Changes and Reset | | | | | |
| Discard Changes and Reset | | | | | |
| Save Options | | | | | |
| Save Changes | | | | | |
| Discard Changes | | | | | |
| Restore Defaults | | | | | |
| Save as User Defaults | | | | | |
| Restore User Defaults | | | | | |
| Boot Override | | | | | |
| Launch EFI Shell from filesystem device | | | | | |

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Defaults values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

Launch EFI Shell from filesystem device

Attempts to launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

CHAPTER 4 DRIVERS INSTALLATION

This section describes the installation procedures for software and drivers. The software and drivers are included with the board. If you find the items missing, please contact the vendor where you made the purchase.

IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

4.1 VGA Drivers Installation


1. Insert the drivers DVD that comes with the board. Click **AMD**, then **AMD eKabini Chipset Drivers**.




2. Click **AMD eKabini Series Graphics Drivers**.




3. When the welcome screen appears, click **Next**.

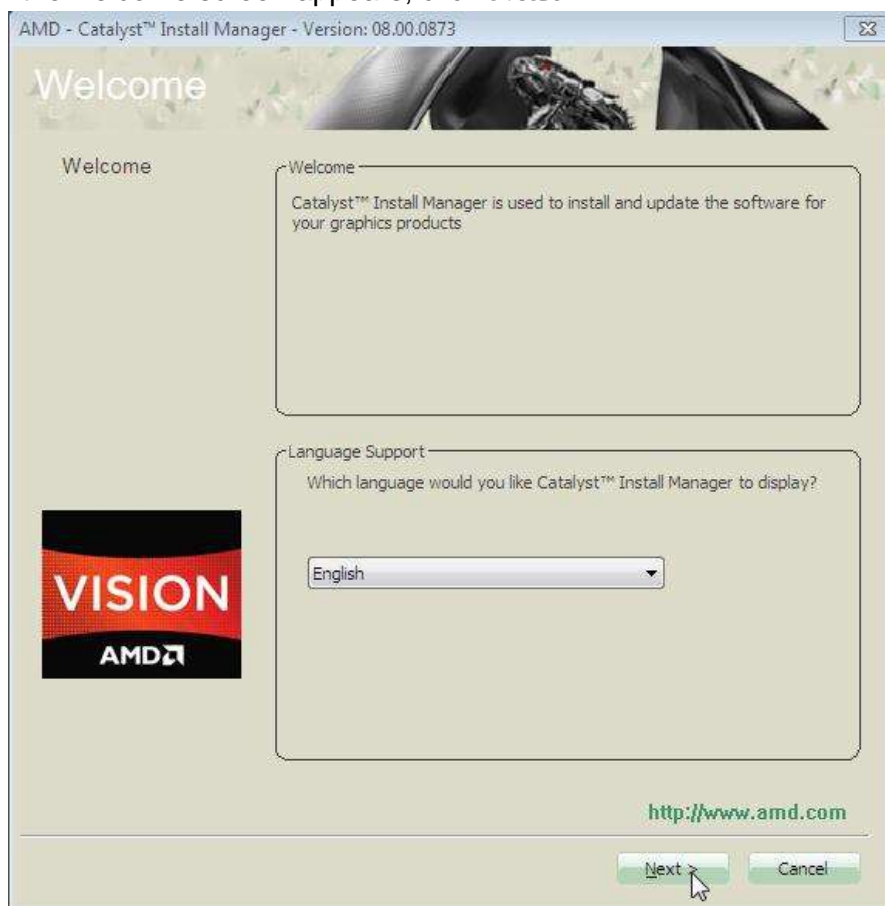

4. Select the language you would like to be displayed and click **Next**.
5. Click **Install** to continue the installation process.

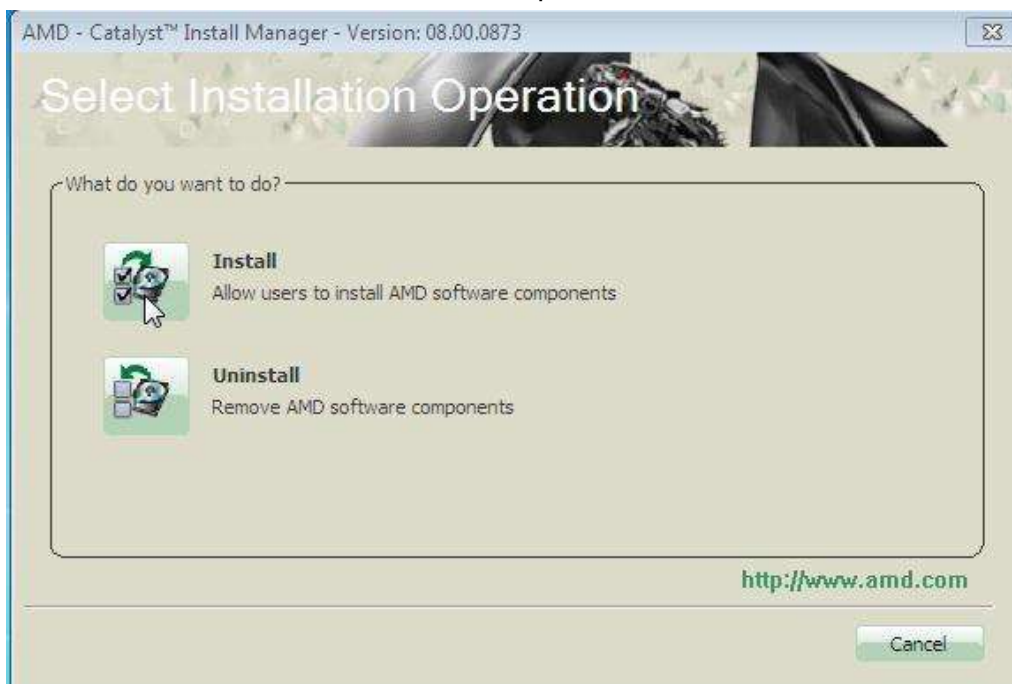


6. Select **Express** and the **installation location** and click **Next**.

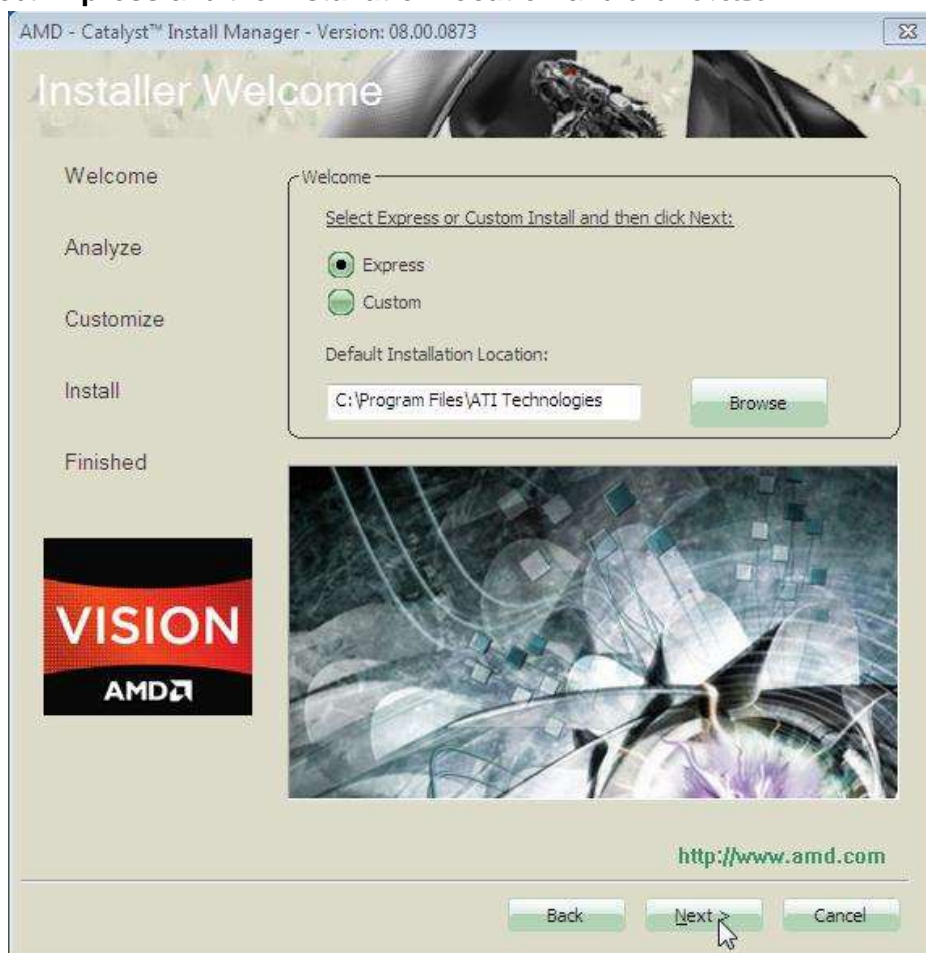

7. Click **Accept** to accept the End User License Agreement.



8. To reboot the system, click **Yes**.

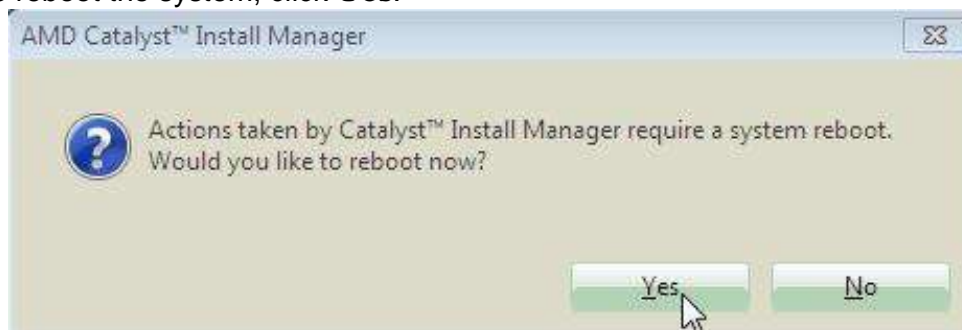


4.2 Realtek HD Audio Driver Installation

1. Click **Realtek High Definition Audio Driver**.



2. On the Welcome to the InstallShield Wizard screen, click **Next** to proceed with and complete the installation process.

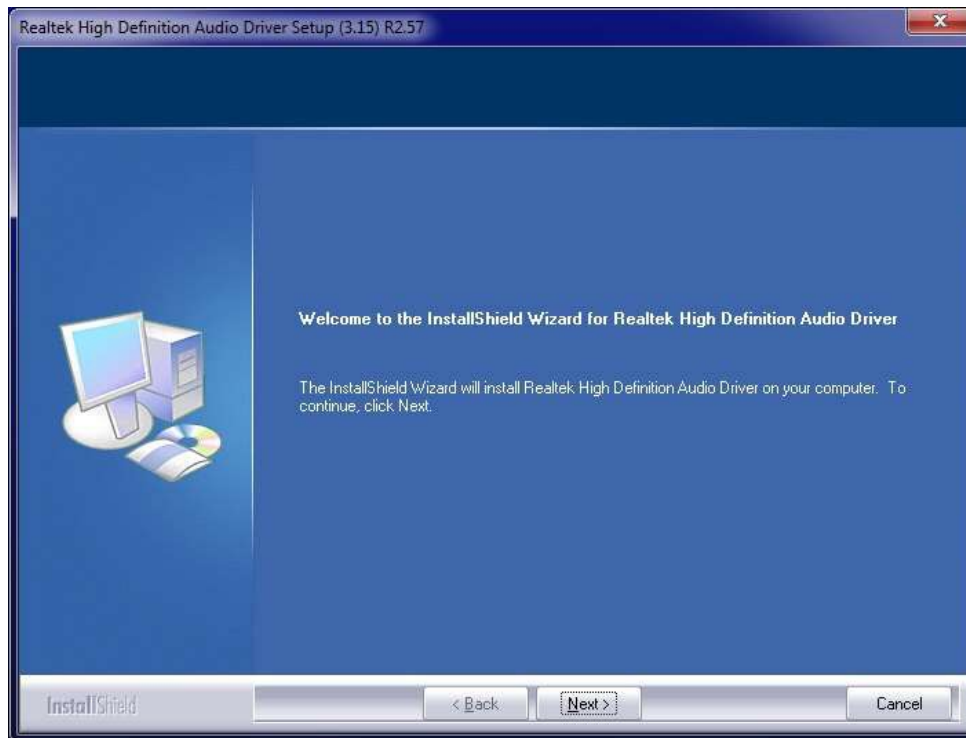

3. Restart the computer when prompted.

4.3 LAN Drivers Installation

1. Insert the CD that comes with the board.
2. Click **LAN Card** and then **Realtek RTL8111G LAN Controller Drivers**.



3. In the Welcome screen, click **Next**.
4. In the License Agreement screen, click **I accept the terms in license agreement** and **Next** to accept the software license agreement and proceed with the installation process.
5. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.
6. When the Ready to Install the Program screen appears, click **Install** to continue.
7. When InstallShield Wizard is complete, click **Finish**.

Wall Mounting Requirements

Note: Before mounting the system on wall, ensure that you are following all applicable building and electric codes.

When mounting, ensure that you have enough room for power and signal cable routing. And have good ventilation for power adapter. The method of mounting must be able to support weight of the SI-22 plus the suspend weight of all the cables to be attached to the system. Use the following methods for mounting your system:

Mounting to hollow walls

- **Method 1: Wood surface** – A minimum wood thickness – 38mm (1.5in.) by 25.4 cm (10in.) – of high, construction – grade wood is recommended.
Note: This method provides the most reliable attachment of the unit with little risk that the unit will come loose or require ongoing maintenance.
- **Method 2: Drywall walls** - Drywall over wood studs is acceptable.

Mounting to a solid concrete or brick wall - Mounts on a flat smooth surface.

Selecting the Location

Plan the mounting location thoroughly. Locations such as walkway areas, hallways, and crowded areas are not recommended. Mount the unit to a flat, sturdy, structurally sound column or wall surface.

The best mounting surface is a standard countertop, cabinet, table, or other structure that is minimally the width and length of the unit. This recommendation reduces the risk that someone may accidentally walk into and damage the device. Local laws governing the safety of individuals might require this type of consideration.

